



**File Name:** brother 7050 printer manual.pdf

**Size:** 3450 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 6 May 2019, 13:37 PM

**Rating:** 4.6/5 from 643 votes.

**Status:** AVAILABLE

Last checked: 7 Minutes ago!

**In order to read or download brother 7050 printer manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with brother 7050 printer manual . To get started finding brother 7050 printer manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# brother 7050 printer manual

CAUTION WARNING Always turn off the power switch and unplug the power cord from the power outlet before accessing any parts inside the printer. WARNING Some parts inside the printer are extremely hot immediately after the printer is used. When opening the front cover or rear cover to access any parts inside the printer, never touch the red colored parts shown in the following figures. If you want to set the printer emulation, you can do it by operating the front panel. If shortgrained paper is being used, it might be the cause of paper jams. The power cord, including extensions, should not exceed 3 meters 10 feet. Drum Unit Assembly Drum Unit with Toner Cartridge AC cord Printer CDROM Paper Cassette Setup Guide Fig. 21 NOTE Components may vary depending on the country. When printing from a Macintosh computer, connect it to the printer via a Network Brother recommends using the NC4100h network board. Universal guide release button Fig. 29 3 Load paper in the paper tray. Check that the paper is flat in the tray and below the maximum paper mark. Connect the AC power cord to the printer. Do NOT connect the interface cable. Fig. 210 2 Plug the AC power cord into an AC outlet, and then turn on the power switch. 3 After the printer has finished warming up, the READY message appears on the LCD display of the control panel. Follow the instructions on the screen. Fig. 213 8 Select "Standard Installation", and then click the Next button. Select HL7050 series, and then click the OK button. The Wizard can create an Executable file that can be sent to other network users, when run, the Executable file installs the appropriate printer driver and network printing software. Select "Search from a list of available printers" or enter your printer IP address. Click the Next button. For Brother PeertoPeer network printer users NetBIOS 1 Select "Brother PeertoPeer Network Printer", and then click the Next button. <http://amorbj.com/upload/file/2020/08/280829062985.xml>

- **brother 7050 printer manual, brother 7050 printer manual download, brother 7050 printer manual pdf, brother 7050 printer manual free, brother 7050 printer manual instructions.**

2 Select "Search from a list of available printers" or enter your printer IP address. Click the Next button. Open the Mac OS X folder. Open the Macintosh HD icon. Open the Applications folder. If paper is loaded into the paper tray, the printer automatically feeds paper sheet by sheet and ejects the printed page into the output tray. Such damage is not covered under any warranty or service agreement. Envelopes that are damaged, curled, wrinkled, or irregularly shaped Envelopes that are extremely shiny or highly textured Envelopes with clasps, snaps or tie strings Envelopes with selfadhesive closures. To reset the blue tabs manually, push the blue tabs back to their original position. However, some envelopes will have feed and print quality problems because of their construction. A suitable envelope should have edges with straight, well creased folds and should not have more than two thicknesses of paper along the leading edge. NOTE When placing paper in the MP tray, note the following When printing, the inside tray automatically rises to feed paper into the printer. Use this output method when you want to print on special media that is thick or should not be bent, such as thick paper, labels, card stock or envelopes. The LED and LCD display indicate the printer status, and pressing the buttons enables several functions in the printer. The display also shows the current printer status. When you use the control panel buttons, the display will change. Function Exit from the control panel menu. Reprint settings and Error messages. Also, by simply spooling a document to a nonsecure area of the printer, the document can be shared with colleagues. NOTE If you print using the driver supplied with the printer, the settings for Job Spooling in the printer driver will take priority over the settings made on the control panel.

Documents that are placed in the PROOF area are available to anyone. <http://flyb787.com/userfiles/bosch-nexxt-500-service-manual.xml>

This function can also be used for a document that will be moved to a public folder at a later date. When you use the control panel buttons, the display will change. If you take the printer offline, the display changes to show the selected emulation. If any problems occur, the display shows the corresponding error message, maintenance message, or call service message to prompt you to take an action. RESET TO FACTORY The printer setting returns to the factory setting. SETTING FAX SENDING Sending fax data Fax function see Brother Solutions Center FAX RECEIVING Receiving fax data Fax function see Brother Solutions Center How to Use the Control Panel The followings are the basic steps when operating the menu buttons;. For more information about the selections available for each mode, refer to the pages listed below. PRINT SETTINGS Prints the test page. PRINT TEST Prints the demonstration sheet. PRINT DEMO Prints the card list. PRINT FILE LIST Prints the font list and samples. PRINT FONTS Shows Printer serial number. DELETE STORAGE SECURE FILE Select the user name, job name and password. PUBLIC FILE Select the user name and job name. PROOF FILE Select the user name and job name. You can check the total number of printed pages. INPUT BUFFER Increase or decrease the input buffer capacity. When using the parallel interface. HP LaserJet Mode The HP LaserJet mode or HP mode is the emulation mode in which this printer emulates the HewlettPackard LaserJet laser printer. Many software applications support this type of laser printer. NOTE The emulation mode affects the setting. Effective modes are shown in brackets in the following table. The default timeout is 5 minutes and it is automatically adjusted to the most suitable timeout setting depending on the frequency of your printer use Intelligent Sleep Mode. Also, useful utilities such as BRAdmin32 and network printing software for the administrator are included. For more information about set up, see section 3.

It is off if no network is detected. Optional Network Board Compact Flash Expansion NC4100h memory Standard for HL7050N DIMM 2 slot External Device Main PCB. The DRAM block contains eight 128Mbit SDRAM, thus having 32MB memory capacity in total. Model name K4S281632DUC75 manufactured by SAMSUNG or equivalent The engine PCB also corresponds with the optional parts to give operational commands to the CPU. Main motor Cover open sensor Preregistration sensor. Current 24V 11 Regulator 10HG 4 Transfer Roller Voltage DEV 5 Regulator Supply Cleaning Roller2 Roller Cleaning. Afterwards, the paper is ejected from the fixing unit by the first eject roller A in the fixing unit. The FU actuator detects whether the paper is ejected correctly or not. Cover open sensor Fig. 39 2.3.2 Multi paper tray paper empty sensor Detects if there is paper in the MP tray. Multi paper tray paper empty sensor MP tray unit Fig. It also detects if there is any jammed paper in the fixing unit. Full stack sensor Fig. 313 2.3.6 Eject sensor Detects if paper is ejected from the fixing unit. The toner sensor on the left side emits light through the window on the left side of the toner cartridge, then the toner sensor on the right side receives it when the toner is low. The charge is generated by ionization of the corona wire, which has a DC bias from the highvoltage power supply applied to it. The surface potential of the exposed area is reduced, forming the electrostatic image to be printed. 1 Cycle of drum Primary charging Laser beam exposure and developing. The developer consists of a nonmagnetic toner. The development roller is made of conductive rubber and the supply roller which is also made of conductive sponge rotate against each other. The residual toner is drawn to the cleaning roller by charging lower voltage compared to the electric potential of the drum surface. Size switch spring Frame Taptite, cup S M3x6. Frame Taptite, pan B M3x35 Fan motor 60 Fig. 4129 477.

Slide the main duct to the right, then remove it. Remove the shutter from the main duct. Feeding gear plate ASSY 4 pcs. Gear 31 Feeding motor ASSY 4 pcs. 4 pcs. WARNING 1 Always turn off the power switch and unplug the power cord from the power outlet before accessing any parts inside the printer. The product should only be used in a clean, dustfree environment with adequate ventilation.

Only unpack a drum unit immediately before you need to install it into the printer. If an unpacked drum unit is subjected to excessive direct sunlight or room light, the unit may be damaged. Warranty cover is not applied to problems caused by the use of 3rd party toner or toner cartridges. These parts would affect the product quality greatly if they lost their function even if they do not appear to be damaged or there is no change in their appearance. The periodical replacement parts listed below should be replaced at the service center referring to the service life. CAUTION While printer exterior and interior cleaning basically can be implemented by the end user, the electrical terminals inside the printer and on the drum unit should be cleaned by a service technician. Turn off the power switch and unplug the power cord. Remove the toner cartridge. Wipe off toner and paper dust from the metal plate in the printer with a dry, soft cloth. Metal plate Fig. The printer is installed on a solid, level surface. Identify the error from the table below and take the corrective action described for each indication to correct it. See the User's Guide for NO DX UNIT the Duplex unit. Move the Duplex lever to the correct position. DX LEVER ERROR Change the job properties or install the Mailbox unit correctly. DOWNLOAD FULL Add more memory. FONT FULL Add more memory. MEMORY FULL Add more memory. IGNORE DATA The accessory you added was not installed properly. ACCESSORY ERROR Your Duplex unit is not a DX7000. Change to a DX7000. Your Lower OPTION MISMATCH tray is not an LT7000.

Instruct the user to turn off the power switch, wait a few seconds and then turn it on again. If the error is not cleared and the same service call appears, identify the error from the table on the next page and take the corrective action described for each indication to correct it. Error Messages Meaning Remedy ERROR S01 FATAL ERROR EX Turn off the printer. Wait a few seconds, with the engine controller then turn it on again. ERROR E49 Malfunction of fuser Turn off the printer. Wait a few seconds, and then turn it on again. ERROR H61 Program ROM checksum Turn off the printer. Wait a few seconds, error and then turn it on again. ERROR H63 DRAM error Turn off the printer. If it is load paper. NOTE The paper trays and LCD panel descriptions in this manual are named as shown below. Upper paper tray Tray A2 Optional lower tray Tray A3, Tray A4 or Tray A5 1. Use both hands to slowly pull the jammed paper from the paper exit. Fig. 69 Note If a Duplex unit is on the printer, take it off the printer. After you pull out the jammed paper, put the Duplex unit back on the printer. Even if the same problem occurs again, follow the procedures in the table below. User Check 1 Check that the printer cable is not damaged or broken. Check also that the cable is connected to the correct interface connectors of both the printer and PC. User Check Check that the serial interface settings are correctly set up with the panel switches. Possible cause Step Check Result Remedy Failure inside Is it possible to print the test Identify the error type, then the printer page with the method of. User Check 1 Reinstall the USB driver by following the steps below; i Doubleclick the file "DeinsUSB.exe" in the USB directory of the CDROM or the floppy disk. No AC power supplied Possible cause Step Check Result Remedy Supply voltage Is the correct voltage present Inform the user that the correct at the outlet Main motor does not rotate.

Highvoltage Check the connections of the Replace the highvoltage power supply connector between the high. Power supply Is the voltage between pins 5. Network board Does replacing the network Replace the network board. Even if the same image defect appears, the following procedures should be followed in the event of specific image defects. High temperature and high humidity conditions can increase the amount of background shading. 3 Clean the corona wire with the wire cleaner. 4 Try installing a new toner cartridge or drum unit. Drum unit Are the drum shaft and drum. Install a new drum unit. Ground Possible cause Step Check Result Remedy contacts Corona failure Is the corona wire dirty. Clean the corona wire with the wire cleaner. Install a new drum unit. 2 Check the paper used meets the recommended paper specifications. 3 Clean the printer interior and the corona wire in the drum unit. Install a new toner cartridge. 3 Check the printer's environment. High temperature and high humidity conditions can cause this problem. Refer to Step 1 in the. Be sure to turn the drum gear in the direction of an arrow. Photosensitive drum Fig. 621 3 Wipe the surface of

the photosensitive drum with a cotton swab until the dust or paper powder on the surface comes off. Refer to Step 1 in the. Corona failure Is the corona wire dirty 1 Clean the corona wire. Highvoltage Is the problem solved after Replace the highvoltage power. A rough surfaced paper may cause the problem. 2 The toner cartridge may be damaged. Install a new toner cartridge. 3 The drum unit may be damaged, or may be nearly at the end of life. Install a new drum unit. The printer prints unexpectedly or it prints garbage. User Check 1 Check if the printer cable is not too long. User Check 1 Press the panel button to print the data remaining in the printer. 2 If this does not clear the error, reduce the complexity of your document or reduce the printer resolution.

User Check Most laser printers have a restricted area that cannot be printed on. Usually the first two lines and last two lines of text cannot print leaving 62 printable lines. Adjust the top and bottom margins in your document to allow for this. Likewise, a router can be set up to pass only certain protocols, so be sure that the desired protocol can be passed through to the print server. Turn off the printer and then on again, Delete and recreate the print server and create a new print queue in order to eliminate the possibility of setup errors. The names MUST EXACTLY agree in order for printing to work. Press all the 7 control panel switches one by one to check if the character and the backlight color will display respectively as the table shows below Switch Character Backlight color. FAN CHECK DENGEN FAN 8 Check fan 2 Press the Set switch. The DENGEN fan stops its rotation. Check the OZONE fan rotate at the full speed. FAN CHECK. The flash card works correctly. Enabling and Disabling Professional Menu Mode Entering the Professional Menu Mode Turn the machine on. Press the Go switch and Set switch together to enter the Professional Menu mode. This is chosen by default. This mode is not open to users. Entering the Service Menu Mode Turn the machine on. DEVELOPER Displays the number of the Developer turning. REPLACE COUNT TONER Displays the number of the toner cartridge replacement. DRUM UNIT Displays the number of the drum unit replacement. Switches Display. Actual print speed varies depending on the paper type, paper size, print method output tray type as shown in the tables below;. This not printed in some countries. Fig. A 2 A22. This tool also shows the printer information such as printer version or page counter for all models only when the printer is connected to a parallel port. Compositon Manufacturer Origin. Leadfree solder does not contain the toxic substance lead, however, inhalation of the fumes may adversely affect the health of workers.

The silver contained in leadfree. You can find a printed Keep the CDROM You must set up the hardware and install the driver before you can use the printer. Please use the Quick Setup Guide to set up the printer. You can find a printed copy in the box or view it on the CDROM we have supplied. You must follow these warnings to prevent possible WARNING personal injury. You must follow these instructions to make sure you use the printer properly and do not damage it. Remember these useful tips when you use the printer. Before you clean the printer, clear a paper jam or replace parts, make sure you have turned off the power switch and unplugged the printer from the AC power outlet. WARNING Do not stand on the printer or the optional Stabilizer unit. You can download the latest software and utilities, read FAQs and troubleshooting tips, and go to the Solutions section to learn how to get the most from your Brother product. Brother fax back system USA only Brother Customer Service has an easytouse fax back system so you can get instant answers to common technical questions and product information. This is available 24 hours a day, 7 days a week. Changes or modifications not expressly approved by Brother Industries, Ltd. This means that the printer does not produce hazardous laser radiation. The label shown below is attached in countries where it is needed. This printer has a Class 3B laser diode which produces invisible laser radiation in the scanner unit. In case of an emergency, you must disconnect the power cord from the power outlet to shut off the power completely. If the replacement plug needs a fuse, fit the same fuse as the original. The contents of this manual and the specifications of this product are subject to change without notice. A43 Bar code control. A43 Print bar codes or expanded characters. When you unpack the printer, check to see that you have all of the following parts.

Drum Unit Assembly Drum Unit with Toner Cartridge AC Power Cord Paper Tray Quick Setup Guide. If you use a USB cable, make sure it is a highspeed twisted cable 12 Mbps , and that you connect it to the USB connector of your PC. Brother Solutions Center An introduction to our website. You can easily access it and receive the latest drivers and information for this printer. Maintenance Tutorial See the maintenance videos for this printer. We recommend that you watch the videos before getting started. Brother Solutions Center An introduction to our website. You can easily access it and receive the latest drivers and information for this printer. If you cannot avoid using the printer with these appliances, we recommend that you use a voltage transformer or a highfrequency noise filter. You will need this space to use the printer properly. The recommended or minimum space requirements are as follows. No Options 100 mm 3.94 inches 100 mm 3.94 in. If you have to put it near a window, use a blind or a heavy curtain to protect the printer from direct sunlight. Do not install the printer near other electronic equipment. Faceup in the table. Please see, Features in the printer driver in Chapter 2. Plain paper Thick paper Thicker paper Bond paper Transparency Envelope Thin paper Recommended paper. Check that the guides are firmly in the slots. Check that the paper is flat and below the maximum paper mark . Put the paper tray back in the printer. 1 20 ABOUT THIS PRINTER Figure 19. Select Tray 1. Select the Paper Size, Media Type and so on. Select Tray 1. Select the Paper Size. Blue Tray ID Figure 112 ABOUT THIS PRINTER 1 23. For more information, see Chapter 3. Open the multipurpose tray and lower it gently. Pull out the multipurpose support flap. 1 24 ABOUT THIS PRINTER Figure 113 Figure 114. Figure 115 Press the blue lever and slide the paper guide. Figure 116 ABOUT THIS PRINTER 1 25. The stack should be no more than 10 mm 0.39 in. high.

Change the following settings in the printer driver. 1 26 ABOUT THIS PRINTER. For more information, see Chapter 3. Open the multipurpose tray and lower it gently. Figure 119 ABOUT THIS PRINTER 1 29. Open the faceup output tray, and then pull out the faceup output tray support if necessary. 1 30 ABOUT THIS PRINTER Figure 120 Figure 121. When you have finished printing your envelopes, close the faceup output tray to reset the blue tabs automatically. The top of the paper stack must be under the maximum paper marks 1 32 ABOUT THIS PRINTER Figure 124 that are on both sides of the tray. Select MP Tray. Select the envelope size, Orientation, and so on. Select Envelopes. Select MP Tray. Select the envelope size. Select Envelopes. ABOUT THIS PRINTER 1 33. Before you print a lot of envelopes, test one to make sure that the print results are what you want. The glue that is used might damage the printer. Do not load different types of paper at the same time in the paper tray because it may cause paper jams or misfeeds. Pull out the multipurpose support flap. 1 36 ABOUT THIS PRINTER Figure 127 Figure 128. When you load paper in the multipurpose tray, make sure it touches the back of the tray and remains below the paper guide Up to Figure 129 Figure 130 Figure 131 ABOUT THIS PRINTER 1 37. The top of the paper stack must be under the maximum paper marks that are on both sides of the tray. 1 38 ABOUT THIS PRINTER Figure 132. Select MP Tray Select the Paper Size, Media Type, and so on. Select MP Tray. Select the Paper Size. Select the Media Type. Use this method when you want to print on special media that is thick or should not be bent, such as thick paper, labels, card stock or envelopes. When you feed paper manually, please remember the. Change the settings for Paper Size, Multiple Page, Orientation and so on. If you click the Duplex icon, the dialog box for duplex settings will appear. There are six types of duplex print options available.

When you use text as a watermark, you can change the font, darkness and angle settings. Job Spooling For more information, see Chapter 3 Quick Print Setup Sleep Time Status Monitor. While the printer is in sleep mode, the light on the display is off, but the printer can still receive data from the computer. Receiving a print file or document automatically wakes up the printer to start printing. Time Specifies the format of the time. This option allows you to change the HRC setting on your Brother HL7050 series printer. HRC is a special function that offers improved print quality of characters and graphics that conventional laser printers cannot attain with resolutions of 300 or 600

dpi. You can download the latest driver by accessing the Brother Solutions Center at You can see the printer driver version. The screens in this section are from Windows The screens on your PC will vary depending on your Operating System. You can change the Layout setting by selecting the setting in the Orientation, Print on Both Sides, Page Order and Page Per Sheet. Advanced Options If you are using Windows NT can access the Brother HL7050 BRScript3 Advanced Options tab by clicking Advanced. Set the Print Quality, Scaling and TrueType Font setting. You can change settings by selecting the setting in the Printer Features list Media Type Output Bin Collate Job spooling You will need to set the RAM Disk size first. For more information, see Chapter 3. Specific options Set the Media Type, Resolution, secure printing, and so on. BRAdmin Professional can also manage other manufacturers products that support SNMP Simple Network Management Protocol. There is an installation program for the PPDs BRScript PPD Installer on the CDROM. When the printer receives data from the computer, it automatically chooses the emulation mode. This feature has been set at the factory to ON. The printer can choose from the following combinations.

When necessary, use the control panel in the INTERFACE menu to select the interface or the serial communications parameters manually. The printer allocates the entire input buffer to that interface when only one interface is selected. 2 23 DRIVER AND SOFTWARE. Button Job Cancel Reprint Back Operation Exit from the control panel menu, reprint settings and error messages. If the printer is in PAUSE mode and you do not want to print the remaining data, you can cancel the job by pressing the Job Cancel button. After cancelling the job, the printer returns to the READY state. When the printer is not receiving data or printing, the display shows NO DATA!!! and you cannot cancel the job. You can use the Reprint button when the printer is in READY or PAUSE state. If the printer does not have enough memory to spool the print job data, it will only print the last page. If you print using the driver we have supplied with the printer, the settings for Job Spooling in the printer driver will take priority over the settings made on the control panel. Documents here will not be protected by a password and anyone can access them using the front panel or a web browser. The printer will not print a PUBLIC document when you send it to the printer. You must use the control panel of the printer or connect to the printer through a web browser. The printer will not print the document when you send it for printing. To print the document you must use the control panel of the printer with the password or connect to the printer using a web browser. Type your password. Press the Set button to set the password The printer will exit this menu after a timeout period. Press the Set button or the Reprint button. If you press the Go button, the display shows PRESS SET TO PRINT. To cancel the reprint job Pressing the Job Cancel button allows you to cancel the current reprint job. Pressing the Set button allows you to choose the displayed menu or option.

Pressing the Back button allows you to return to the previous level from the current menu level. Data Orange LED LED indication Blinking 3 15 CONTROL PANEL Meaning Data is in the printer memory. Receiving or processing data. No data left in the memory. When you use the control panel buttons, the display will change. If you take the printer offline, the display changes to show the emulation you have chosen. If there are any problems, the display shows the appropriate error message, maintenance message or call service message so you will know that you need to take action. Ready to print Printing Warming Up There is a problem with the printer. Choosing a menu Setting Reprint times Pause. Select NONE, PAGE COUNTER or JOB NAME in the lower LCD setting of the SETUP menu. When you press the Set button to choose a setting, an asterisk appears at the end of the display for a short time. Press the Set button to move to the next menu level. Paper tray Multipurpose tray Optional lower tray Optional Duplex unit for Duplex printing Optional Mailbox unit There are eight menus. For more information about the selections available in each menu, please see the pages listed below. Shows ROM version. Shows Network version only Network users. Network users. Shows the size of memory in this printer. STOP Stop printing if there is a TONER LOW error. Description Select the user name, job name and password. Select the user name and job name. This printer can print pages in portrait or landscape ORIENTATION orientation. PORTRAIT or

LANDSCAPE This printer can be adjusted to align the page format. FONT PITCH CHARACTER SET TABLE PRINT AUTO LF AUTO CR AUTO MASK LEFT MARGIN RIGHT MARGIN 3 29 CONTROL PANEL Description. RESET MENU Display Shows Description Resets the printer and restores all printer settings including RESET PRINTER command settings to settings you have previously made with the control panel buttons.

Resets the printer and restores all printer settings including FACTORY RESET command settings to the factory settings. Many software applications support this type of laser printer. Using this mode will allow your printer to operate at its best with those applications. This printer supports level 3. Many graphics and CAD applications support this type of plotter. Use this mode so your printer will work when printing from those types of applications. EPSON FX850 and IBM Proprinter XL Mode. It is not possible to reset the network settings using the control panel. If you want to reset the print server to its. For example, Job Cancel is shown as "can". The buzzer will sound when one of the control panel buttons is pressed, or the status of the printer changes. See the table for a description of the buzzer meanings. Buzz Conditions. You can increase the capabilities of the printer with these items. Options Lower tray unit Duplex unit Three paper trays LT7000 see 43 see 44 CompactFlash card DIMM memory. When all three trays are installed, the printer can hold up to 2100 sheets of plain paper. If you want to buy an optional lowertray unit, call the dealer you bought the printer from. When it is installed, you can select either duplex printing or simplex printing on the control panel or with a software command. For the paper tray and optional lower tray tray1, 2, 3 or 4 Put the side to be printed on first, facedown, with the top of the paper at the back of the tray. Figure 43 To install the Mailbox unit, please see the Users Guide that we have supplied with the Mailbox. You can print 100 sheets of plain paper to each bin of the mailbox. When you remove bins 2, 4, 7 and 9, the total output increases to 1900 sheets including the printer output tray. Many useful features, such as BRAdmin Professional for the administrator and Brother network printing software, are included on the CDROM supplied with the HL7050 printer.